



**BATTERY**

**Battery Module**

The illustration below shows how to remove the battery module.

**Remove battery module**

1. Turn the notebook over. Unlock and hold the latch, and remove the battery.

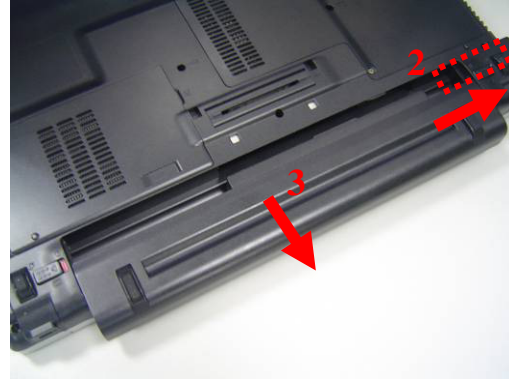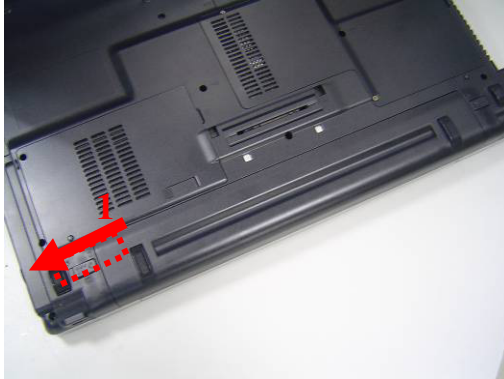



**CPU MODULE  
REMOVAL**

**CPU Module**

The illustrations below show how to remove the CPU module from the notebook.


**Removing CPU**

1. Remove 5 screws (M2\*5) and take the CPU door away.

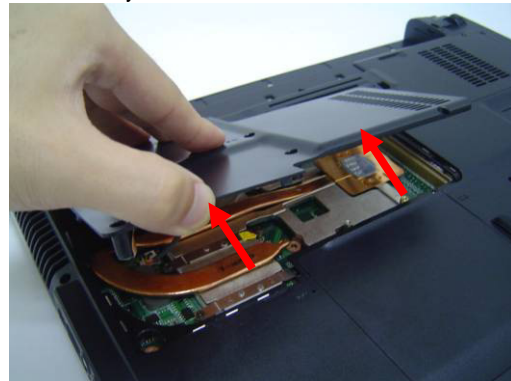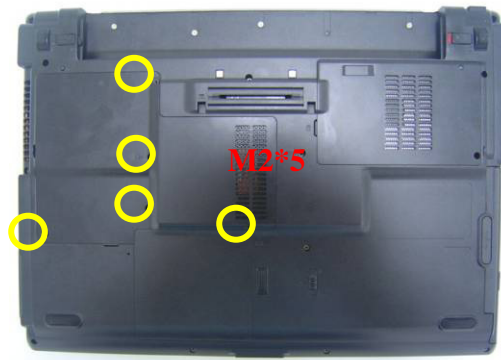

**Remove VGA board module**



2. Remove 4 screws (M2\*5) (M2\*3), then remove the VGA board module

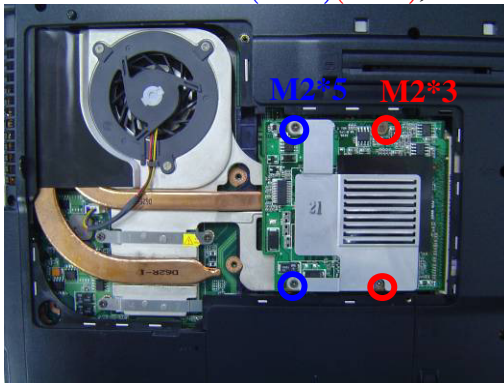


3. Remove the DIMM cover from the bottom case.




4. Remove 4 screws (M2\*5) aside the CPU. And disconnect the CPU fan cable.

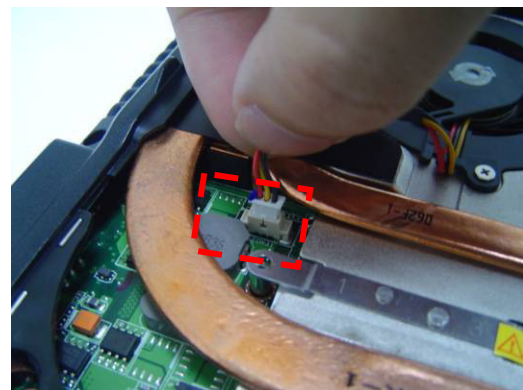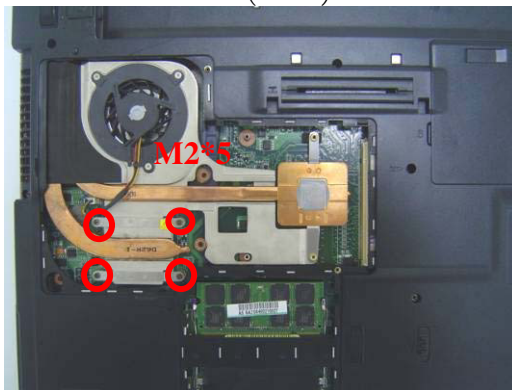

5. Remove the CPU thermal module from the bottom case.

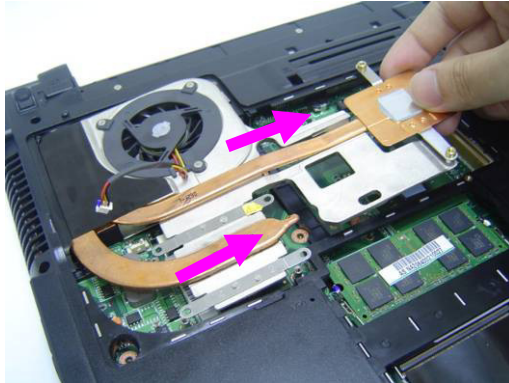

6. Turn the non-removable screw here 180 degrees counter-clockwise to loosen the CPU.

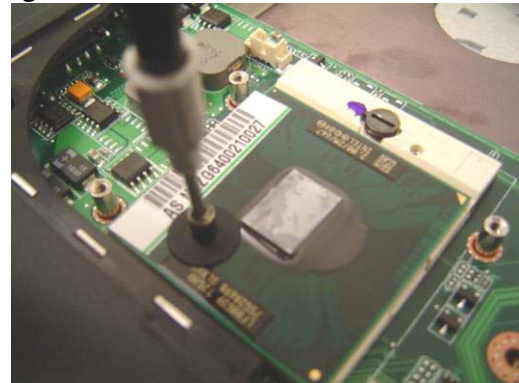

7. Squeeze the vacuum handling pump and use it to lift the CPU away.

